PURA VIDA AIR SYSTEMS 2006D&L



INSTALLATION AND OPERATIONS MANUAL

PLEASE READ AND SAVE THESE INSTRUCTIONS!

EPA FIFRA87447-TX-001
8901-NV-001



CARB G-11-040

OPERATIONS AND MAINTENANCE SCHEDULE

This manual will guide the maintenance personnel in installing and servicing the Pura Vida Air Systems 2006D&L unit.


| INTRODUCTION | | | | | 3 |
|---------------------|-----------|-------------|-------|---|---|
| <u>INSTALLATION</u> | | | | | 4 |
| WIRING DIAGRAM | <u>/</u> | | | | 4 |
| MAINTENANCE | | | | | 4 |
| LAMPS | | | | | 4 |
| OFNEDAL | | | | | 4 |
| GENERAL | | | | | |
| INSPECTION | | | | | |
| | | | | | |
| | | | | | |
| INSTALLATION | | | | | 5 |
| | | | | | _ |
| CATALYST | ••••• | | | | 5 |
| OFNEDAL | | | | | _ |
| | | | | | |
| INSPECTION | | | | | |
| REMOVAL | | | | | |
| | | | | | |
| | | | | | |
| INSTALLATION | | | | | 6 |
| DALLACTO | | | | | ^ |
| BALLASTS | ••••• | | ••••• | • | ხ |
| FILTERS | | | | | 6 |
| REPLACEMENT P | ADT MILES | EDO | | | _ |
| KEPLACEMENT P | ARI NUMB | <u>seks</u> | | | 6 |
| CONTACT INFOR | MATION | | | | 6 |

INTRODUCTION

The Pura Vida Air Systems 2006D&L is a stand-alone unit used to reduce the levels of Volatile Organic Compounds (VOCs) and viable airborne biological contaminants. The unit is utilized as a "point-of-use" air purifier. The 2006D&L uses two 2" catalyst panels and two 2" MERV 13 filters. A 1" UV shield is attached to the catalyst to protect the user from UV light. The D&L may be wall mounted or set on a surface. This unit is suitable for spaces up to 2700 ft³. For recommended unit configurations, contact Pura Vida Air Systems. All Pura Vida Air Systems products incorporate 3-step P technology: MERV Filtration, UVGI Lamps and Photocatalysis.




2006D&L, Filter, UV Shield and Catalyst

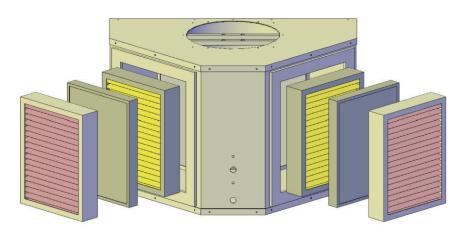

INSTALLATION

This unit is designed to be installed as a wall-mount unit or set on a flat surface. Installation must be completed by competent personnel. <u>Pura Vida Air Systems</u> <u>assumes no liability for damages or injuries sustained from installations done by other than qualified Pura Vida Air Systems technicians.</u>

- or a wall-mount application, determine where this unit is to be hung. This unit has eyholes for a hori ontal hanging only. n the rear panel of the unit, there are 2 eyhole slots 11 1 16 apart.
- Install 0 lb. rated wall anchors in the position determined.
- sing a helper, hang the 2006D&L on the wall anchors.
- Plug in the unit or wire permanently using the wiring diagram below. Run the
 unit at all speeds, ensuring the fan has not bound during shipping. ou should see
 a blue glow through the plastic window at bottom of the unit.

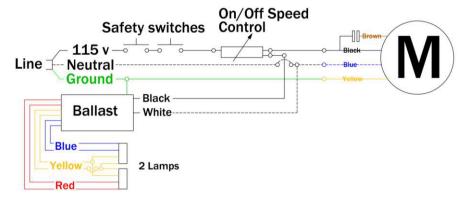

MAINTENANCE LAMPS

- ALL UNITS MUST BE POWERED DOWN BEFORE SERVICING.
- ALL MAINTENANCE PERSONNEL MUST WEAR UV PROTECTIVE SAFETY GLASSES. ALL EXPOSED SKIN MUST BE PROTECTED BY UV RESISTANT CLOTHING.

GENERAL

To operate effecti ely, the lamps must be replaced each year, as the intensity of the lamps decreases o er time. The catalyst must be energi ed by the lamps to create the field of hydro yl radicals that is re uired to remo e V s and biologicals. <u>ithout the proper</u> lamp output, V s and biologicals will not be reduced

INSPECTION

- The clear plug in the front of the unit will emit a blue glow if the lamps are operating. If one lamp is defectie, neither lamp will light.
- Power the Pura Vida Air Systems unit down using the kill switch or breaker to unit.
- pen the front grille and remo e the air filter and V shield catalyst assembly.
- If a lamp appears blac ened at one end, replace the lamp with a Pura Vida Air Systems V 1 . Ensure each lamp is plugged in firmly to receptacle.
- Replace catalyst V shield and filters in proper orientation and close the grille.
- Power up the unit.

• If the clear plug does not emit any glow, the problem may be in the ballast or wiring. all your Pura Vida Air Systems Representati e for assistance.

REMOVAL

- Power the Pura Vida Air Systems unit down using the kill switch or breaker to unit.
- pen the front grille and remo e the air filter and V shield catalyst assembly.
- rasp the lamp and roc bac and forth gently while pulling steadily upwards. **BE SURE NOT TO USE FORCE!** The lamp may burst if it collides with the fan.

DISPOSAL

• In most states and pro inces, V I lamps may be disposed of in the same manner as fluorescent lamps. hile V I lamps contain a trace amount of mercury, the uantity is so minute that disposal is not regulated by federal standards established by the EPA. Indi idual states and pro inces may ha e established disposal standards. Please adhere to your local regulations.

INSTALLATION

• Installation is the re erse of remo al.

CATALYST

- ALL ITS M ST E P ERED D E RE SERVI I
- ALL MAI TE A E PERS EL M ST EAR V PR TE TIVE SA ET LASSES. ALL E P SED S I M ST E PR TE TED V RESISTA T L T I .

GENERAL

Pura Vida Air Systems recommends catalyst replacement e ery fifteen years to pro ide an efficient system. As debris and contaminants accumulate on the catalyst, the effecti eness of the catalyst is decreased. The catalyst must be inspected periodically for build up of particulate.

INSPECTION

- Turn off power to the 2006D&L unit. nplug unit from ser ice.
- pen the front grille and remo e the air filter and V shield catalyst assembly.
- If the catalyst appears clean and free of particulate, congratulations therwise, proceed to remo al.

REMOVAL

- If the catalyst will be cleaned and reused, keep track of orientation so they will be returned from the order they were removed. This will prevent installation problems.
- Turn off power to the 2006D&L unit. nplug unit from ser ice.
- pen the front grille and remo e the air filter and V shield catalyst assembly.

CLEANING

- If the catalyst needs cleaning, remo e catalyst panel. Proceed to a wash bay, mop sin or other washing area.
- Sha e or brush hea y particulate from the catalyst.
- Spray catalyst liberally using u- algon al lean, Special D or other suitable coil cleaner on catalyst only. Allow to sit 1 minutes, and then wash off with water.

• Allow catalyst to dry completely before returning to ser ice. May be dried in the sun.

DISPOSAL

• Indi idual states and pro inces may ha e established disposal standards. Please adhere to your local regulations.

INSTALLATION

• Installation is the re erse of remo al.

BALLASTS

The ballast supplies power to the lamps. It is located in the 2006D&L unit, where power enters the unit. If a lamp is unlit and a new lamp attached to the same harness will not light, the ballast may be at fault. If a ballast failure is suspected, contact Pura Vida Air Systems for replacement options.

FILTERS

The filters help protect the catalyst and lamps from dirt and debris. They should be inspected and replaced regularly. Pura Vida Air Systems recommends MERV-13 or higher filters.

REPLACEMENT PART NUMBERS AND SCHEDULE

Lamps, catalyst and ballast should only be replaced by the Pura Vida Air Systems equivalent.

| | DESCRIPTION | Pura Vida Air Systems PART NUMBER |
|-----------|------------------------|--------------------------------------|
| BALLAST | Advance IUV-2S18-HI-LD | GA18IUV |
| LAMPS | Philips PL-L 18W/TUV | UVCHO18W |
| FILTER | 8"x 10"x 2" MERV 13 | GA0810213 |
| CATALYST | 8"x 10"x 2" | GA08102S |
| UV SHIELD | 8"x 10"x 1" | GA0810UVS |

UL DISCLAIMERS

- The health aspects associated with the use of this product and its ability to aid in disinfection of environment air have not been investigated by UL.
- Use only Philips type TUV PL-L 18 Watt lamps.



LIMITED WARRANTY

FAILURE TO MAINTAIN YOUR EQUIPMENT WILL VOID THIS WARRANTY

Your P RA VIDA AIR S STEMS purification system is expressly warranted from the date of installation to be free from manufacturing defects for the coverage period stated below. Defective parts must be returned no later than thirty (30) days after the failure by you to the installing contractor together with the P RA VIDA AIR S STEMS purification system's model number, serial number, and documented installation date of the P RA VIDA AIR S STEMS purification system.

ONE (1) YEAR COVERAGE -- RESIDENTIAL AND COMMERCIAL APPLICATIONS

The covered equipment and covered components are warranted by P RA VIDA AIR S STEMS for a period of ONE (1) year from the date of the original unit installation, when installed in a residential or commercial application. If during this period, a covered component fails because of a manufacturing defect, P RA VIDA AIR S STEMS will provide a free replacement part. You must pay shipping charges and all other costs of warranty service. P RA VIDA AIR S STEMS will not pay labor involved in diagnostic calls or in removing, repairing, servicing or replacing parts. Such costs may be covered by a separate warranty provided by the installer. NOTE - If the date of original installation cannot be verified, the warranty period will be deemed to begin six (6) months after the date of manufacture.

EXCLUDED COMPONENTS

The following components are not covered by this warranty: the UVCGI lamps or the pleated photo catalytic material. These are replacement items, which must be replaced as stated in the Maintenance section of the installation instructions to ensure effective operation.

REPAIRS

All repairs of covered components must be made with authorized service parts by a qualified service dealer or contractor. Labor charges are not covered by this warranty.

WARRANTY LIMITATIONS

This warranty will be voided if the covered equipment is removed from the original installation site. This warranty does not cover damage or defect resulting from:

- 1 Flood, wind, fire, lightning, or installation and operation in a corrosive atmosphere (chlorine, fluorine, salt, recycled waste water, urine, fertilizers, or other damaging chemicals).
- **2** Accident, or neglect or unreasonable use or operation of the equipment, including operation of electrical equipment at voltages other than the range specified on the unit nameplate (includes damages caused by brownouts).
- 3 Modification, change or alteration of the equipment, except as directed by P RA VIDA AIR S STEMS.
- **4** Operation with system components (indoor unit and control devices), which do not match, or meet the specifications recommended by P RA VIDA AIR S STEMS.
- 5- Operation with system components (indoor unit and control devices), which exceed operational temperature range of -20 F to 122F.

THIS WARRANTY SHALL NOT OBLIGATE THE MANUFACTURER FOR ANY LABOR COSTS AND SHALL NOT APPLY TO DEFECTS IN WORKMANSHIP OR MATERIALS FURNISHED BY THE INSTALLING CONTRACTOR AS CONTRASTED TO DEFECTS IN THE P RA VIDA AIR S STEMS PURIFICATION SYSTEM ITSELF. IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE AFORESAID COVERAGE PERIOD. THE MANUFACTURER'S LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, OTHER THAN DAMAGES FOR PERSONAL INJURIES, RESULTING FROM ANY BREACH OF THE AFORESAID IMPLIED WARRANTIES OR THE ABOVE LIMITED WARRANTY IS EXPRESSLY EXCLUDED. THIS LIMITED WARRANTY IS VOID IF DEFECT(S) RESULT FROM FAILURE TO HAVE THIS UNIT INSTALLED BY A QUALIFIED HEATING AND AIR CONDITIONING CONTRACTOR. IF THE LIMITED WARRANTY IS VOID DUE TO FAILURE TO USE A QUALIFIED CONTRACTOR, ALL DISCLAIMERS OF IMPLIED WARRANTIES SHALL BE EFFECTIVE UPON INSTALLATION.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

To register your new PURA VIDA AIR SYSTEMS Purification System, PLEASE CUT ON DOTTED LINE AND RETURN THE REGISTRATION FORM TO THE ADDRESS NOTED BELOW.

ustomer Registration orm

ustomer ame
Address
ity State Pro ince ip Postal ode
ome Phone E-mail
Installing ontractor Phone
Date of installation Model umber

Please send this completed form to
P RA VIDA AIR S STEMS
20 De ine St.
San Antonio, T 210

Serial umber